


MOVEABLE ELBOW P4392

Models: P4392 (chromed)

4FA002301

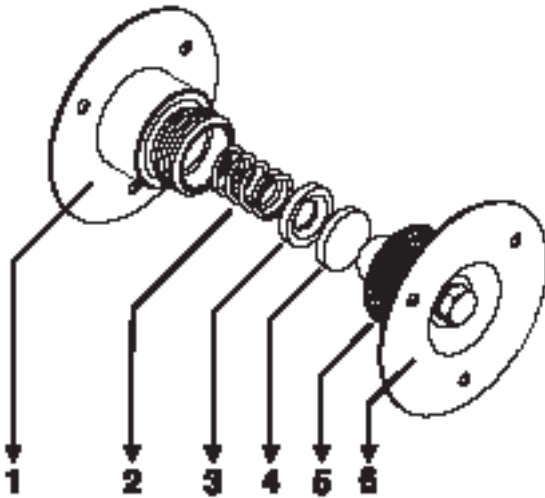

The elbow is an optional installation accessory for Loudspeakers models P4734 – P4735 – P4736 – P4737 – P7311 – P7331 and P8331 facilitates its installation on a wall, being able to horizontally and vertically move the same in order to obtain an optimum direction of the sound to the audition point.

- 1-Elbow base, wall anchoring.
- 2-Spring
- 3-Tab washer
- 4-Rubber washer
- 5-Locking nut
- 6-Anchoing of the elbow to the loudspeaker.



ASSEMBLY

For the assembly and anchoring to the wall the elbow has to be dismantled. For this, turn the locking nut (5) anticlockwise until fully unscrewed. Remove the spring (2) and the washers (3 and 4) carefully and put them to one side.

The unit (6) is held on its back part to the loudspeaker with the three screws supplied, and the locking nuts on the loudspeaker. The nut holes are indicated below the connection terminals, on the back of the loudspeaker.

The elbow base (1) is first screwed to the wall in the chosen area using the screws and rawplugs provided. Then the spring is inserted, as well as the tab washer and the rubber washer (as indicated in the graphic), pressing them with the fixing ball (6) (previously attached to the loudspeaker). Hold the unit by turning the locking nut clockwise.

Place the loudspeaker in the desired position, both horizontally and vertically, and tighten the locking nut to keep the unit in place. Once fully tightened, corrections in the loudspeaker tilt can be carried out without having to loosen it again, due to the elasticity of the rubber washer.

MAXIMUM TURNING LIMITS

